



Operating note for the telescopic arms for device types:

Slider 5C-Z75, 5C-Q75 oder 7F-CNW90

ATTENTION! *Separate the slider from the compressed air supply during the following settings to avoid unintentional shots.*

Pan telescopic arm:

Keep the red button on the locking pin (1) pushed and pull back the black part. Now it is unlocked. While the locking pin is pulled back you could choose the position of the telescopic arm (positions Fig.3-5). Then release the locking pin. Now it is locked when the red button juts out.

ATTENTION! *The locking pin only locks properly in the shown positions (Fig.3-5).*

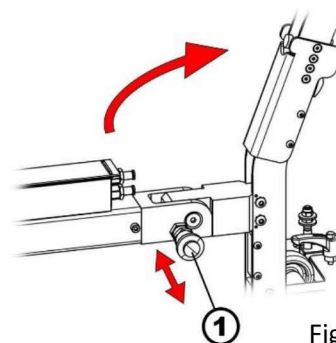


Fig. 1

Set length:

Turn the tension lever (2) anticlockwise for two turns to open it. Then you can adjust the length of the telescopic arm as desired by pulling or pushing on the handle. To fix the telescopic arm, tighten the tension lever (2) clockwise.

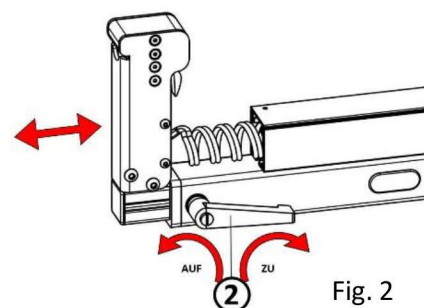


Fig. 2

Positions:

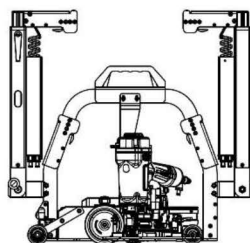


Fig. 3

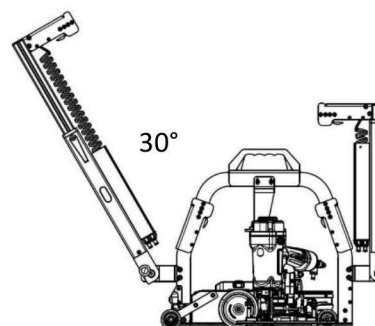


Fig. 4

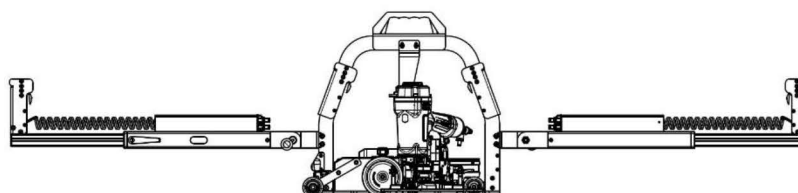


Fig. 5